

# Fanuc

## Power Feed Contact

Picture	Code No.	Original P/No.	Dimension	Position	Application
	<b>F001</b>	A97L-0001-0664	Φ25xΦ9x10	Lower	O. P. Q. R. T. V. W1.2.3.4 series AWF type
	<b>F002</b>	A97L-0126-0001	Φ16xΦ6x6.3	Common	O. P. Q. R. T. V. W1.2.3.4 series Manual type
	<b>F003</b>	A290-8008-X107	Φ8xΦ4x10	Common	K. I. N. M series
	<b>F004</b>	A290-8032-Z882	Φ16xΦ6x6.3	Common	W1.2.3.4 series AWF type
	<b>F005</b>	A290-8101-X750	2.8x7.7x23	Common	α-0A. 1A. 0B. 1B series Manual & AWF type
	<b>F006L</b>	A290-8110-X750	4x12x30	Common	α-C. iA. iB series Manual & AWF type
	<b>F006A</b>	A290-8110-X750	4x12x23	Common	α-C. iA. iB series Manual & AWF type Ref : F006L
	<b>F006B</b>	A290-8008-X107	3x12x30	Common	α-0B. 0C series Manual & AWF type
	<b>F007</b>	A290-8048-X759	Φ15/6.25x6H	Upper	W-0 series
	<b>F008</b>	A290-8119-Z780	4x10x26	Common	α-1iD.1iE series Manual & AWF type
	<b>F008L</b>		4x10x30	Common	α-1iE series Manual & AWF type